

Replacing a Joystick Boot on a Mega Transmitter

Required tools: 3/32" hex wrench, flat-tip screwdriver, and a tube of caulk.


1. Loosen six (6) screws on the back of the transmitter with the 3/32" hex wrench.
2. Carefully separate the top of the unit from the bottom using a flat-tip screwdriver.



3. Remove all portions of the old joystick boot.
4. Apply caulk to the edges of the new boot (face) to create a seal when installing into position.



5. Install the new boot.
6. Apply a layer of caulk around the edges of the new boot (back) to adhere the joystick boot to the transmitter.

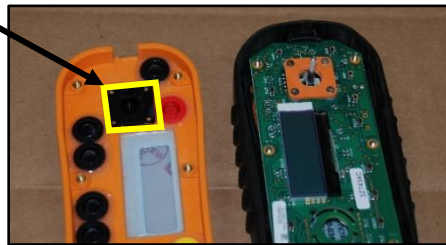

7. Allow 8-10 hours (overnight) for the caulk to setup before assembling the transmitter.
8. Assemble the transmitter. Do not overtighten the hex screws (6).

Action Manufacturing Inc.

1105 Lake Road, PO Box 620
Marshall, MN 56258
(507) 532-5940