



Replacing a Joystick on a Quantum Transmitter (Belly Box)

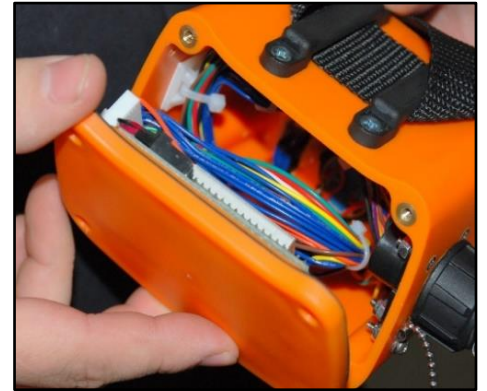


Required tools: 1/4" socket with extension & smalls cross-tip screwdriver.

1. Remove the four (4) screws on the bottom of the transmitter.
2. Carefully detach the bottom of the transmitter while keeping it supported.

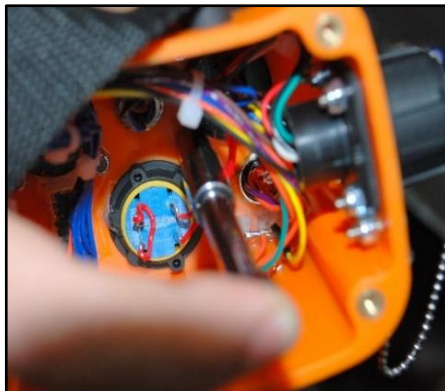

3. Locate the Ny-Lock nuts holding the joystick assembly.
4. Hold the Ny-Lock nut with the 1/4" socket while removing each screw (4) holding the joystick assembly with the cross-tip screwdriver.

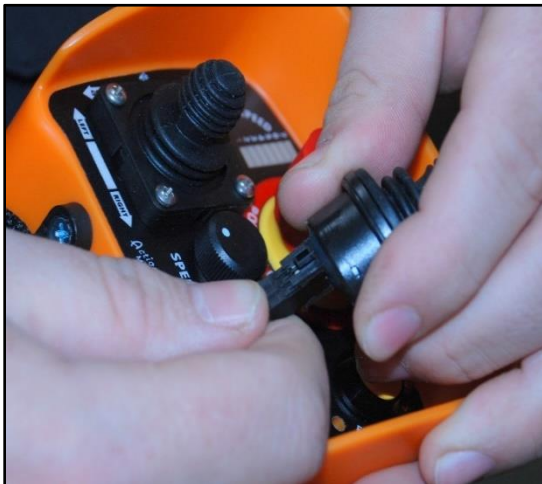

5. Remove the joystick assembly from the transmitter and unplug the wires.
6. Plug the wires into the new joystick assembly.



7. Align the “bump” to face toward the front of the transmitter (enable button).
8. Replace the four screws and secure with Ny-Lock nuts.
9. Carefully place the bottom plate on the transmitter and secure with the Phillips head screws.

Action Manufacturing Inc.

1105 Lake Road, PO Box 620
Marshall, MN 56258
(507) 532-5940